 
## Entering and Processing an EA code CCP in Sunquest Tip Sheet

## **Entering an EA code Convalescent Plasma in BPE**


• Barcode unit number



• In the component field manually enter the SQ component code and division code that corresponds with the EA code on the unit.





• Complete entering the unit by barcoding the ABO and Expiration date.

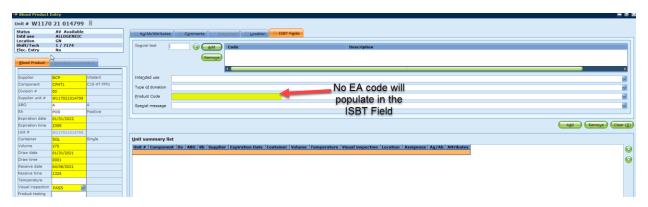

## Processing an EA code Convalescent Plasma in BCP

- In BCP for the component prep function type in "C" and the first 3 numbers of the component code i.e. C166.
- Bar code the unit number
- In the component field use the drop down menu to manually choose the correct component type.

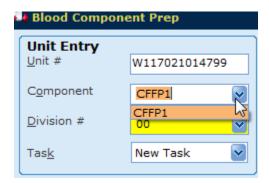

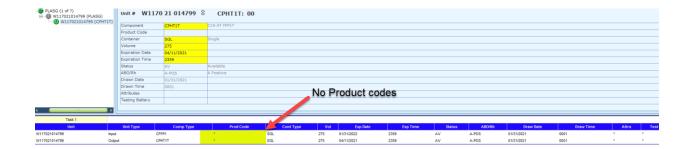

## ISBT label will not print

Label unit with new EA code using Affiliate Specific downtime SOP.